


TIMBER ART DESIGN UK

BR 990015

ASSEMBLY INSTRUCTIONS

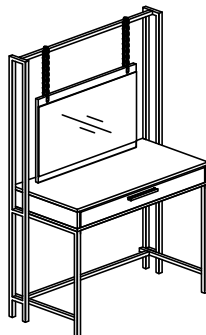


IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

WARNING AND INSTRUCTIONS

- PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN PLACE. IN THE UNLIKELY EVENT THAT YOU NEED TO RETURN YOUR PRODUCT, IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE. FAILURE TO COMPLY TO THESE PROCEDURES, NO RETURN'S WILL BE ACCEPTED.
- IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- DUE TO THE SIZE OF THIS PRODUCT WE RECOMMEND THAT IT IS ASSEMBLED IN THE ROOM INTENDED FOR USE.
- WHEN YOU ARE READY TO START, MAKE SURE THAT YOU HAVE THE RIGHT TOOLS, PLENTY OF SPACE AND A CLEAN, DRY AREA FOR ASSEMBLY.
- UNWRAP ALL PACKAGING MATERIALS AND PLACE THE COMPONENTS ON TOP OF THE CARTON BOX OR ON A CLEAN FLOOR TO PREVENT IT FROM SCRATCHING.
- CHECK THE PACK AND MAKE SURE YOU HAVE ALL THE PARTS LISTED.
- ENSURE THAT THIS PRODUCT IS FULLY ASSEMBLED AS ILLUSTRATED BEFORE USE.
- TOOLS NOT INCLUDED.
- CHECK ALL SCREWS OR BOLTS ARE TIGHTENED AND INSPECT REGULARLY.
- THIS PRODUCT SHOULD ONLY BE USED ON FIRM LEVEL GROUND.
- KEEP SMALL PART OUT OF REACH OF CHILDREN.
- MAKE SURE THE LEGS REMAIN IN CONTACT WITH THE GROUND.
- DO NOT USE POWER TOOLS TO CONSTRUCT THIS PRODUCT.
- DO NOT TIGHTENED SCREWS UNTIL FULLY ASSEMBLED.
- DO NOT OVER TIGHTENED SCREWS OR BOLTS.
- DO NOT USE THIS PRODUCT IF PARTS ARE MISSING, DAMAGE OR WORN.
- DO NOT SIT AND STAND ON THE PRODUCT.
- TO CLEAN WIPE WITH A SPONGE AND WARM SOAPY WATER. DO NOT USE SOLVENT BASED CLEANERS OR DETERGENTS AS THEY CAN BLEACH OR DAMAGE THE PRODUCT.
- NEVER USE SCOURERS, ABRASIVES OR CHEMICAL CLEANERS.

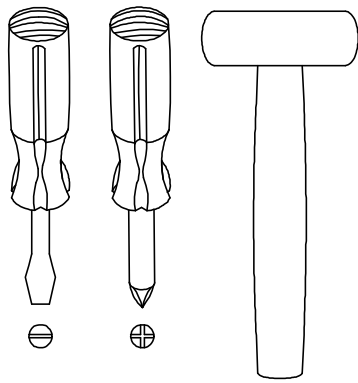


(Tools not provided)

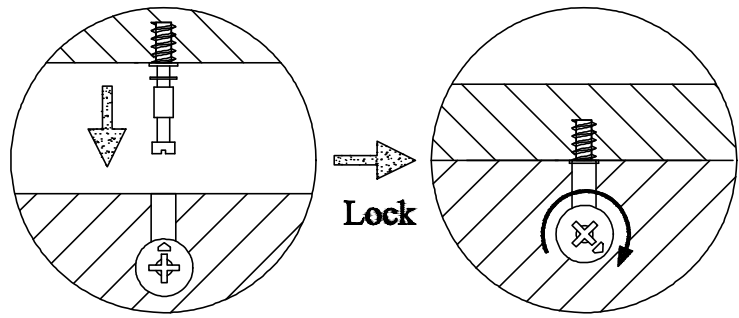

Use a flat blade screwdriver to tighten the cam nuts. A quarter turn clockwise is all that is needed.


This is how a cam nut works.....

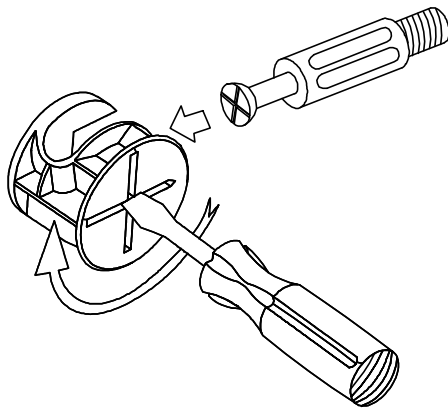

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

TWO PERSONS REQUIRED TO ASSEMBLE THIS PRODUCT



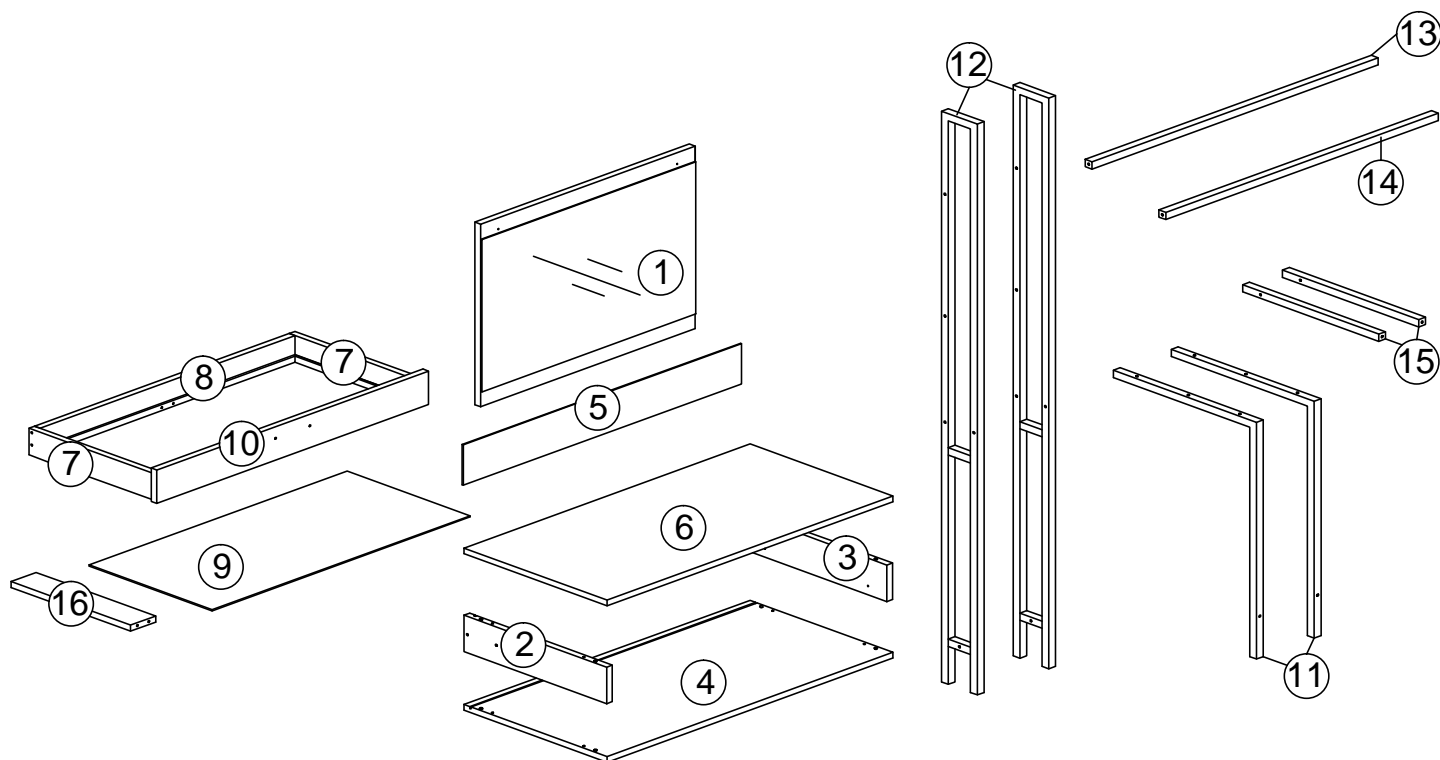
















1. Please check that you have all the parts listed before you start assembling. If you do find that something is missing, do not continue assembly. Please contact your supplier immediately.
2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
3. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.



PARTS LIST

| NO. | PARTS | | | | | QTY |
|-----|-------|---|-----|---|----|-------|
| 1 | 480 | X | 600 | X | 16 | 1 PC |
| 2 | 96 | X | 399 | X | 16 | 1 PC |
| 3 | 96 | X | 399 | X | 16 | 1 PC |
| 4 | 800 | X | 400 | X | 16 | 1 PC |
| 5 | 778 | X | 106 | X | 3 | 1 PC |
| 6 | 800 | X | 400 | X | 16 | 1 PC |
| 7 | 350 | X | 70 | X | 16 | 2 PCS |
| 8 | 712 | X | 70 | X | 16 | 1 PC |
| 9 | 722 | X | 344 | X | 3 | 1 PC |
| 10 | 760 | X | 88 | X | 16 | 1 PC |
| 11 | 622 | X | 400 | X | 19 | 2 PCS |
| 12 | 1500 | X | 100 | X | 19 | 2 PCS |
| 13 | 800 | X | 19 | X | 19 | 1 PC |
| 14 | 762 | X | 19 | X | 19 | 1 PC |
| 15 | 381 | X | 19 | X | 19 | 2 PCS |
| 16 | 334 | X | 70 | X | 16 | 1 PC |



HARDWARE LIST


| NO. | DESCRIPTION | | QTY |
|-----|--|----------------------|-----|
| A |  | WOOD DOWEL M8x25MM | 8 |
| B |  | CB SCREW M3.5x16MM | 18 |
| C |  | CB SCREW M4x38MM | 4 |
| D |  | CSK CAP WOOD M6x50MM | 4 |
| E |  | HANDLE SCREW M4x19MM | 2 |
| F |  | CB SCREW M4x32MM | 10 |
| G |  | CAM NUT | 10 |
| H |  | CAM BOLT | 10 |
| I |  | CAM CAP | 10 |
| J |  | HANDLE 7050-96 | 1 |
| K |  | L KEY | 1 |
| L |  | PVC CORNER L BRACKET | 4 |
| M |  | JCBB BOLT M6x40MM | 4 |
| N |  | JCBB BOLT M6x70MM | 2 |
| O |  | DRAWER SLIDE 14" | 1 |
| P |  | DRAWER SLIDE 14" | 1 |
| Q |  | DOOR CLAMP 300MM | 2 |
| R |  | WASHER | 2 |
| S |  | EURO SCREW 6 X 9 | 4 |

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




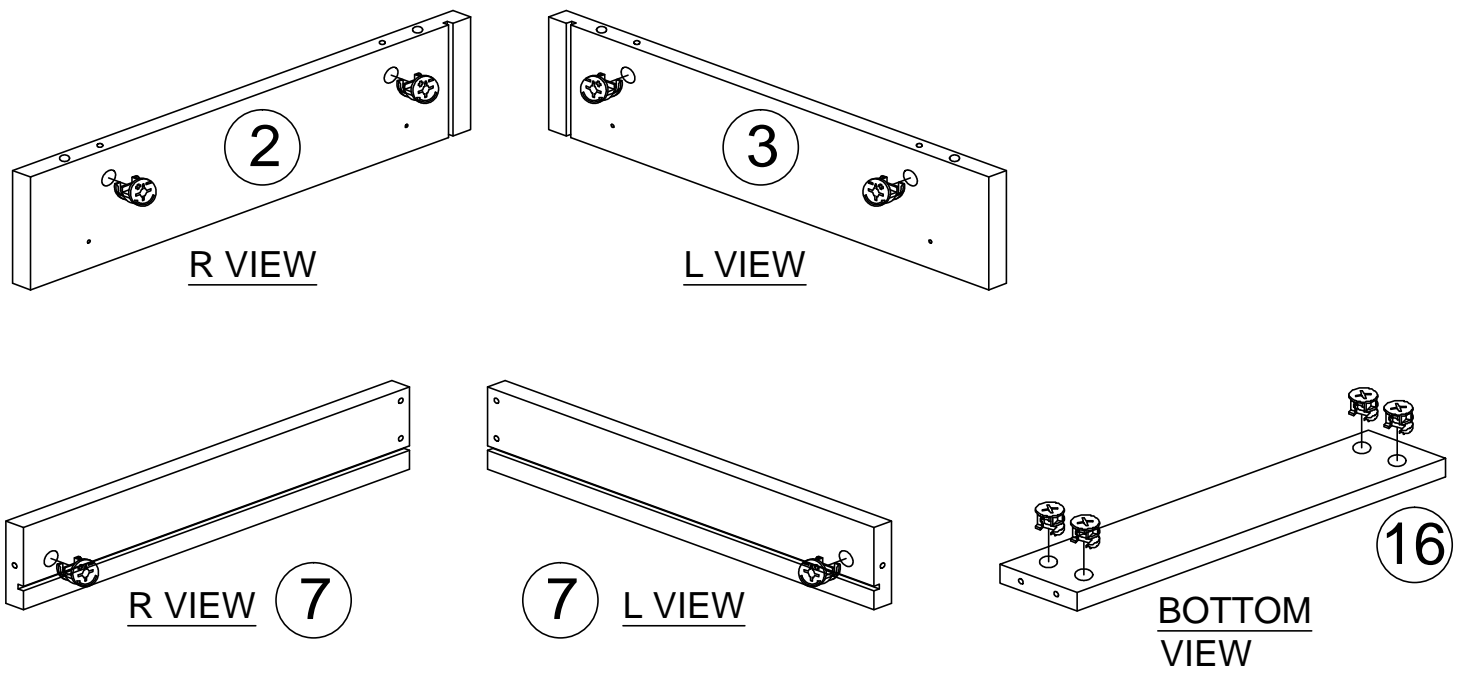
STEP 1

| | | | |
|---|---|--------------------|----|
| A |  | WOOD DOWEL M8x25MM | 8 |
| H |  | CAM BOLT | 10 |

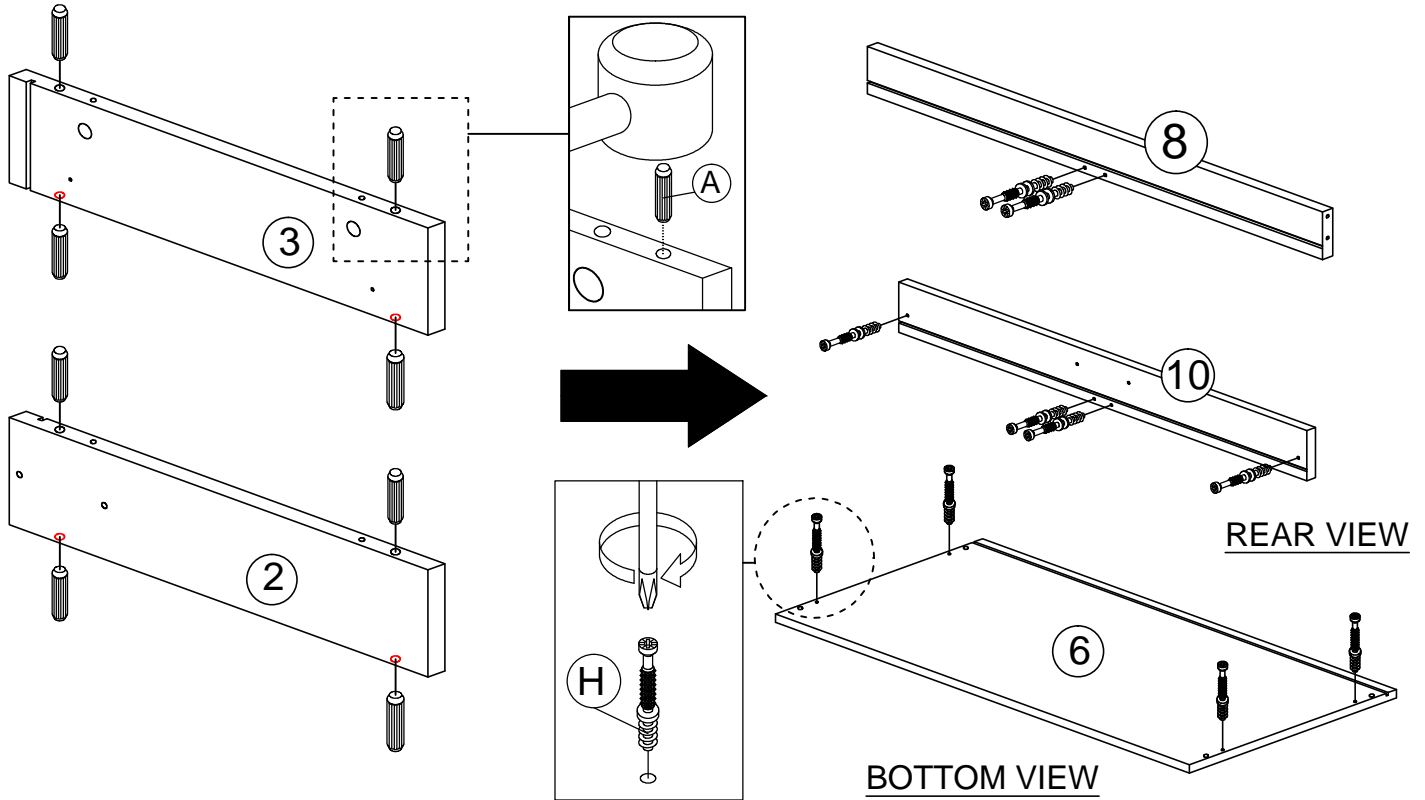

STEP 2



| | | | |
|---|---|---------|----|
| G |  | CAM NUT | 10 |
|---|---|---------|----|




THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.







STEP 3
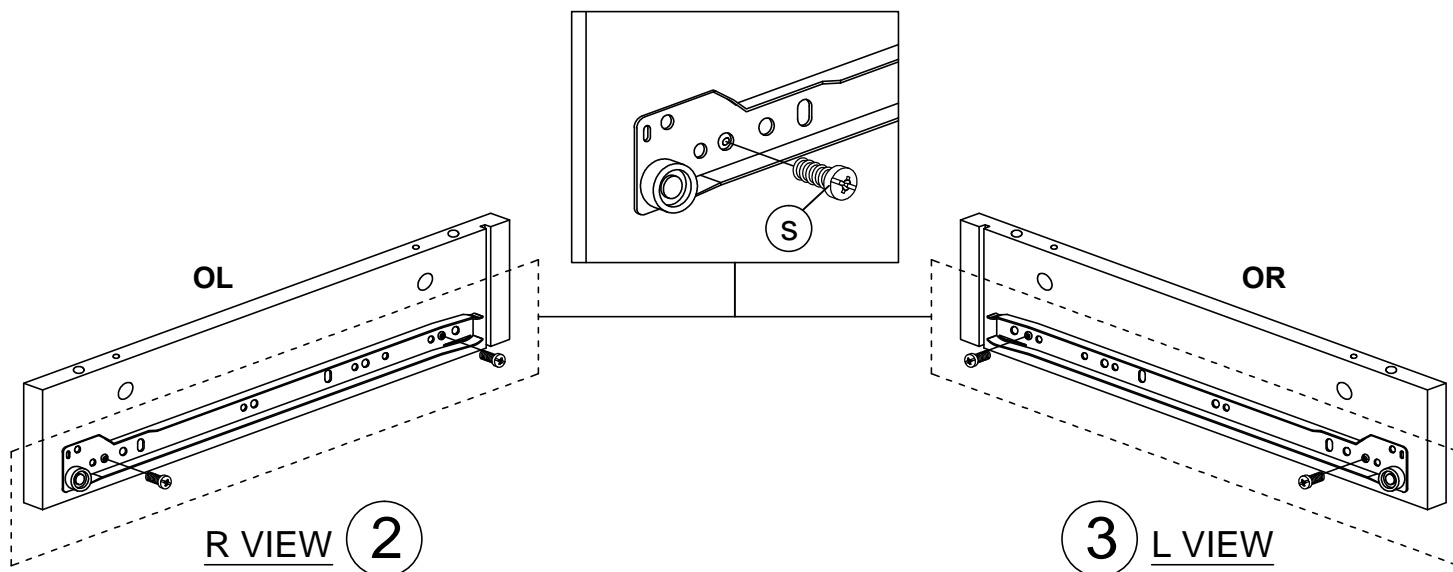
| | | |
|---|---|---|
| S |  EURO SCREW 6 X 9 | 4 |
| O |  DRAWER SLIDE 14" | 1 |



STEP 4

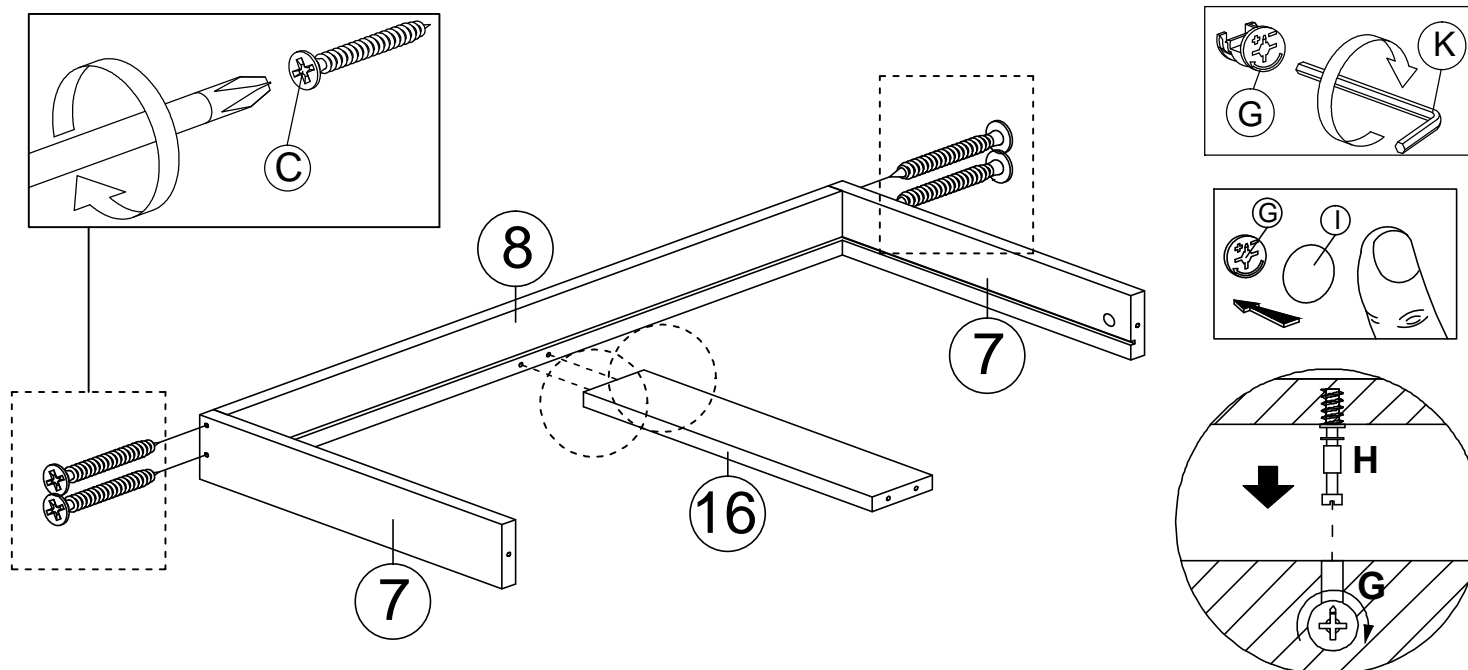

| | | |
|---|---|---|
| C |  CB SCREW M4x38MM | 4 |
| I |  CAM CAP | 2 |
| K |  L KEY | 1 |







THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.






STEP 5
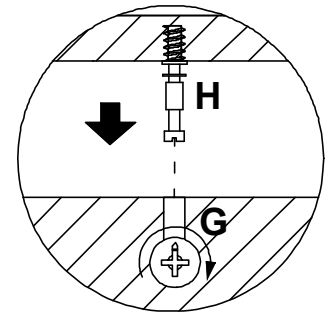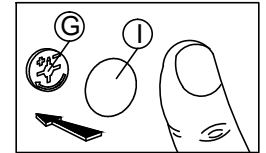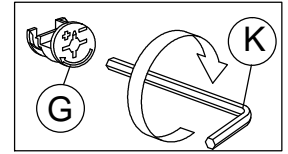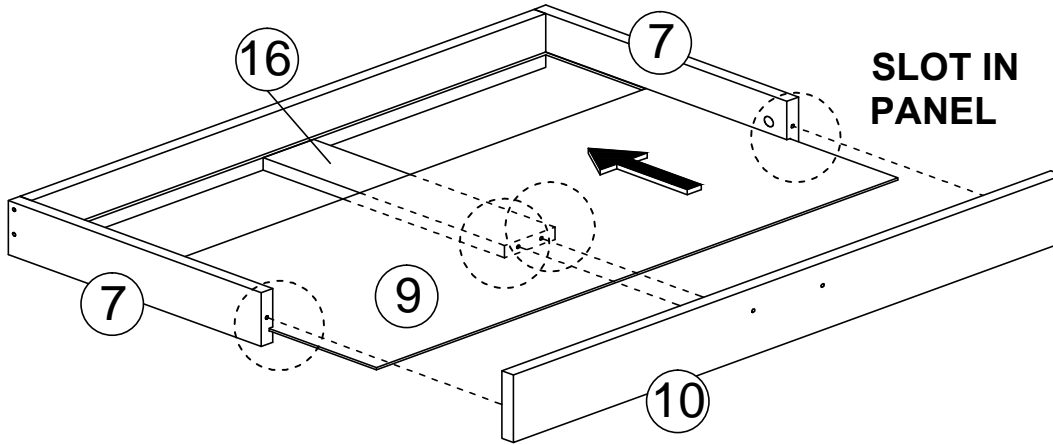
| | | | |
|---|---|---------|---|
| I |  | CAM CAP | 4 |
| K |  | L KEY | 1 |



STEP 6

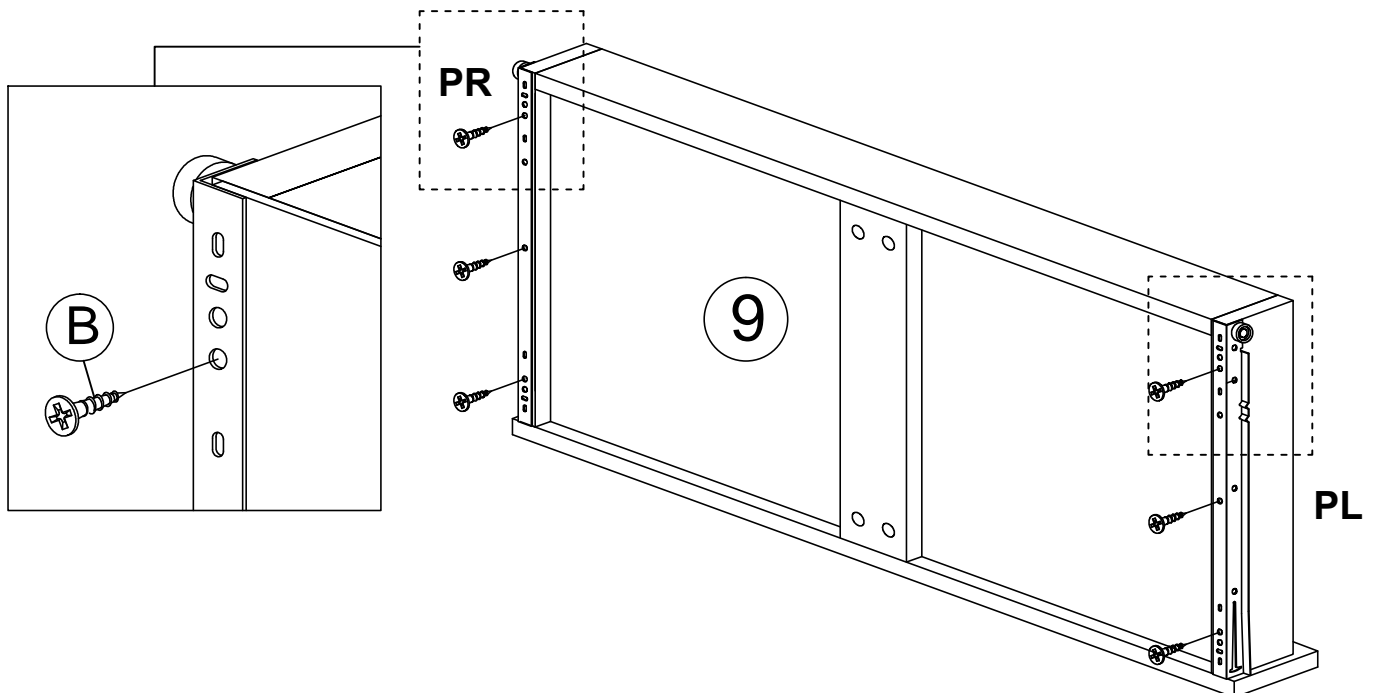


| | | | |
|---|---|--------------------|---|
| B |  | CB SCREW M3.5x16MM | 6 |
| P |  | DRAWER SLIDE 14" | 1 |





THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.





STEP 7

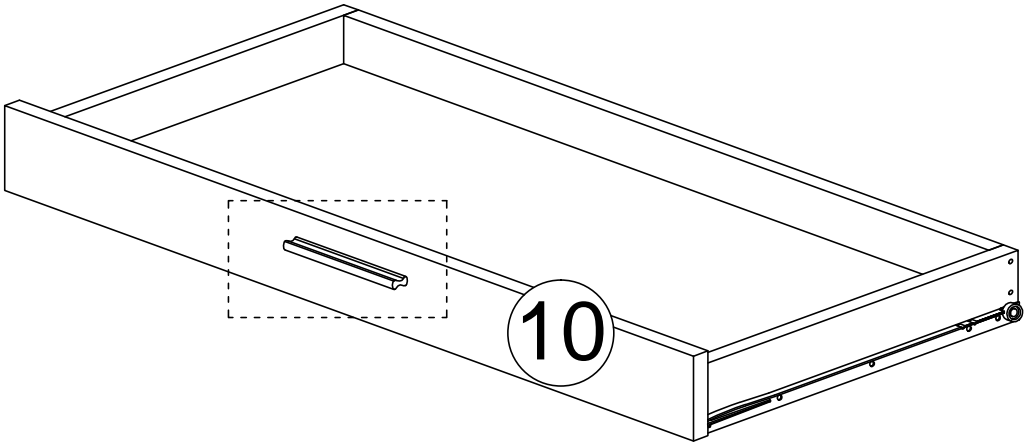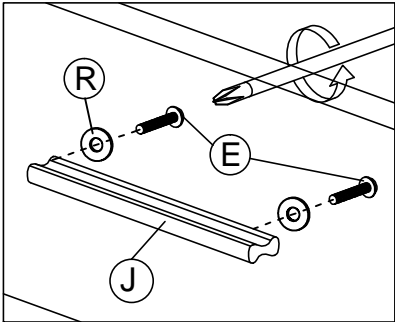
| | | | |
|---|---|----------------------|---|
| E |  | HANDLE SCREW M4x19MM | 2 |
| J |  | HANDLE 7050-96 | 1 |
| R |  | WASHER | 2 |



STEP 8

| | | | |
|---|---|----------------------|---|
| K |  | L KEY | 1 |
| D |  | CSK CAP WOOD M6x50MM | 4 |

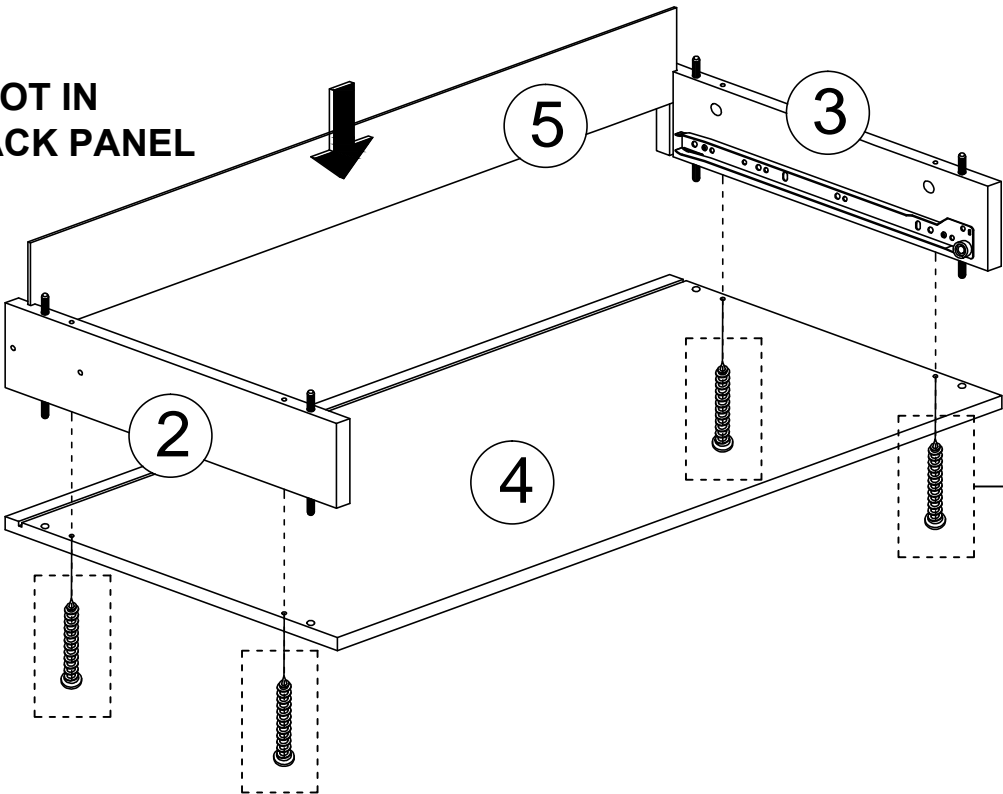

**SLOT IN
BACK PANEL**







THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.





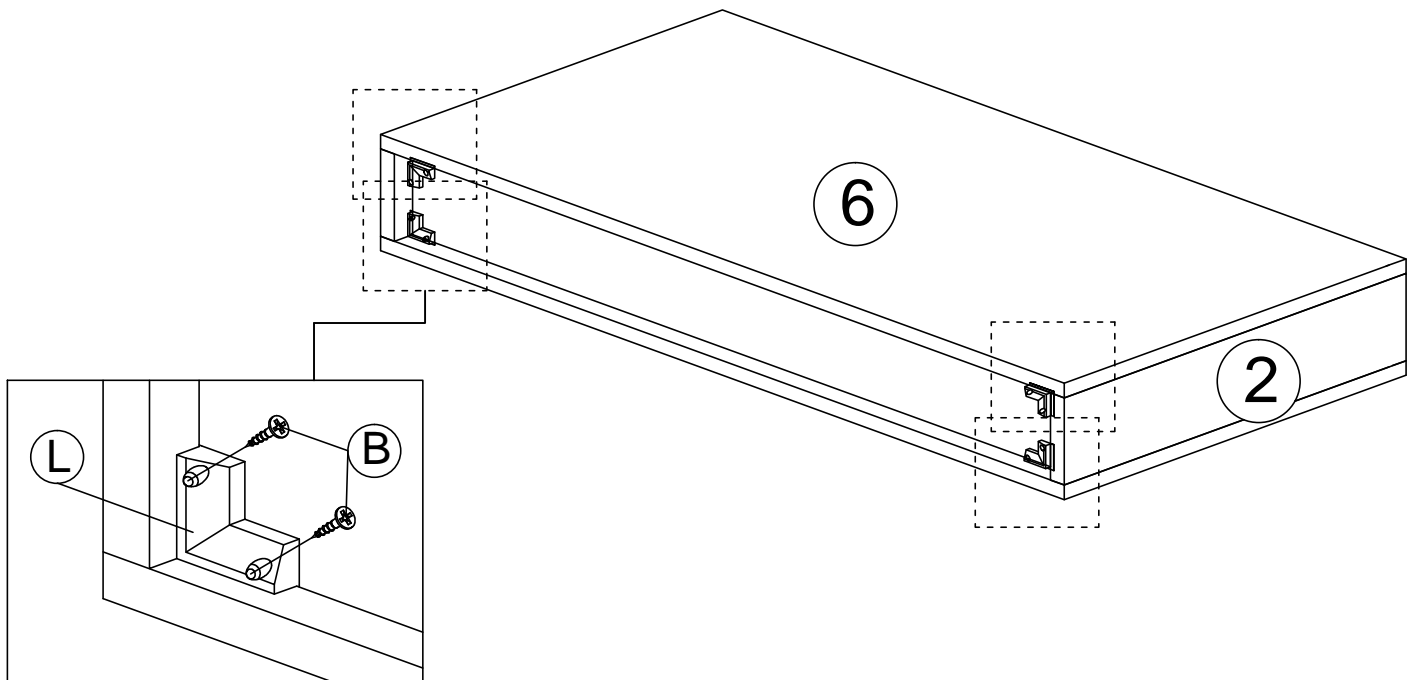
STEP 9

| | | | |
|---|---|---------|---|
| I |  | CAM CAP | 4 |
| K |  | L KEY | 1 |

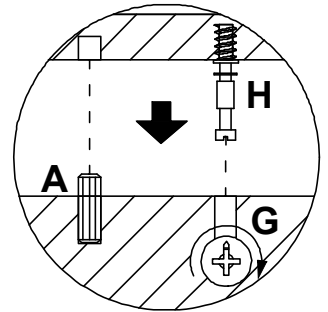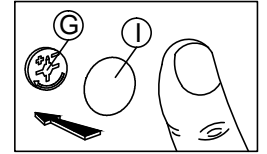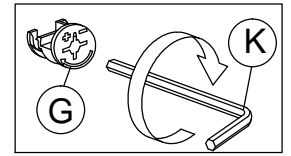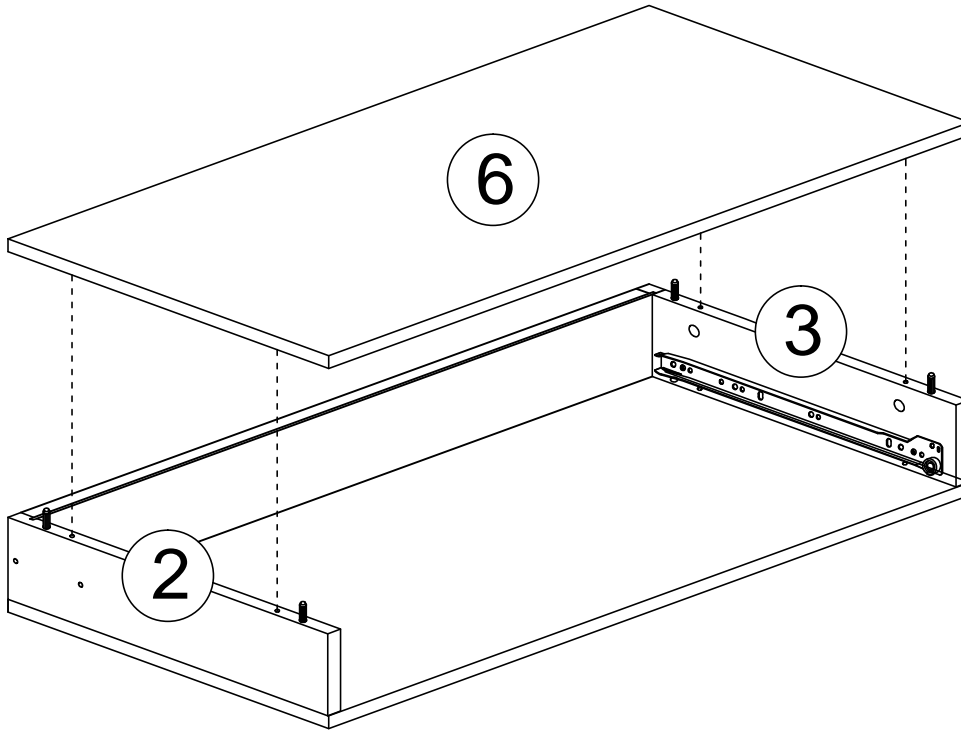

STEP 10



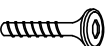
| | | | |
|---|---|----------------------|---|
| B |  | CB SCREW M3.5x16MM | 8 |
| L |  | PVC CORNER L BRACKET | 4 |




THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.





STEP 11

| | | | |
|---|---|-------------------|---|
| M |  | JCBB BOLT M6x40MM | 1 |
| K |  | L KEY | 1 |
| N |  | JCBB BOLT M6x70MM | 1 |

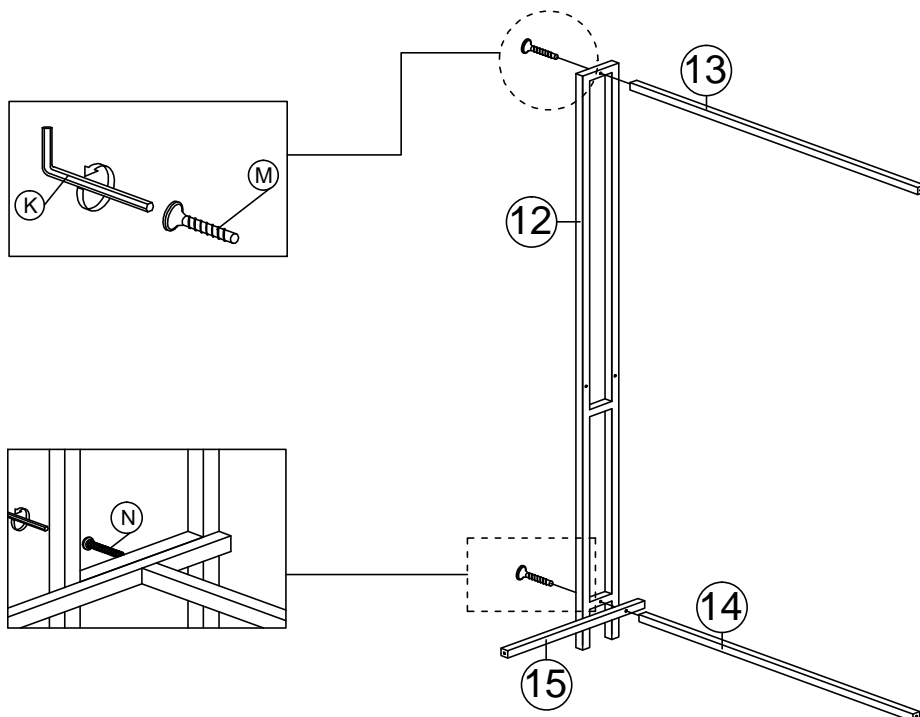

STEP 12





| | | | |
|---|---|------------------|---|
| F |  | CB SCREW M4x32MM | 2 |
|---|---|------------------|---|

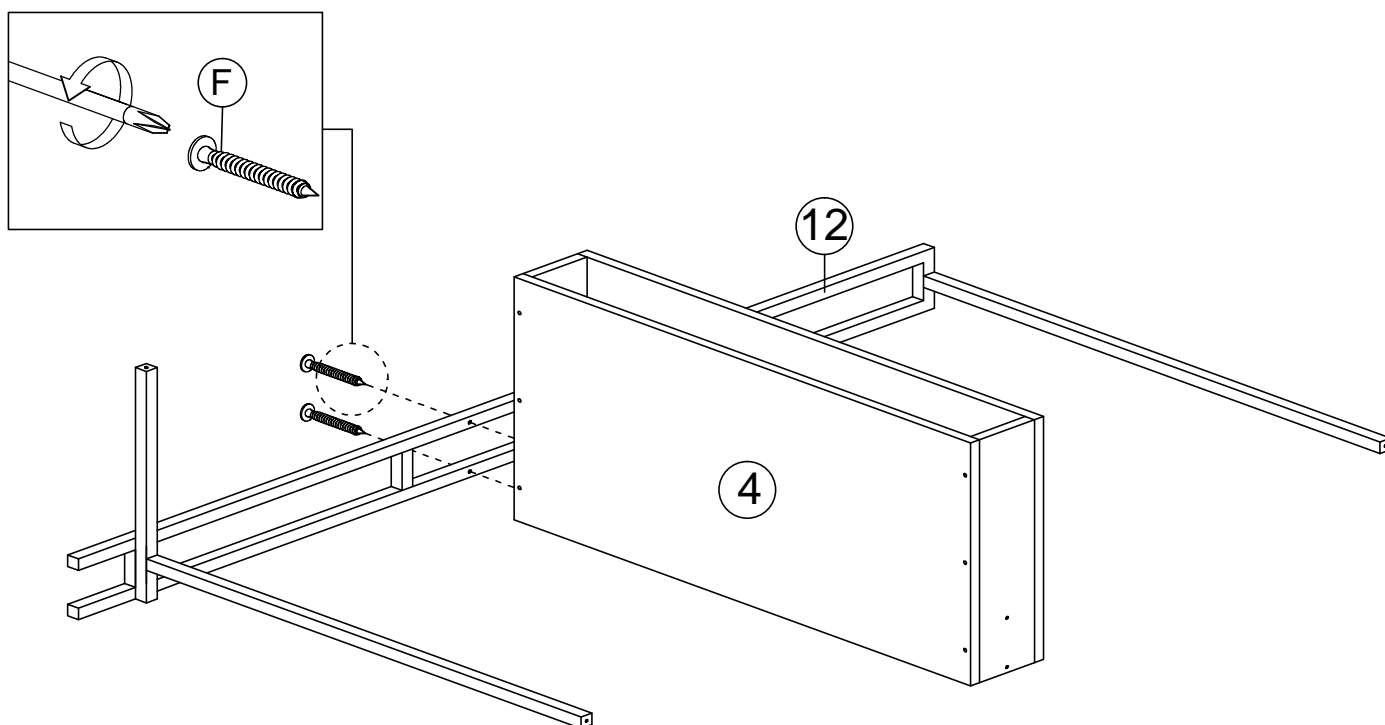


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.







STEP 13
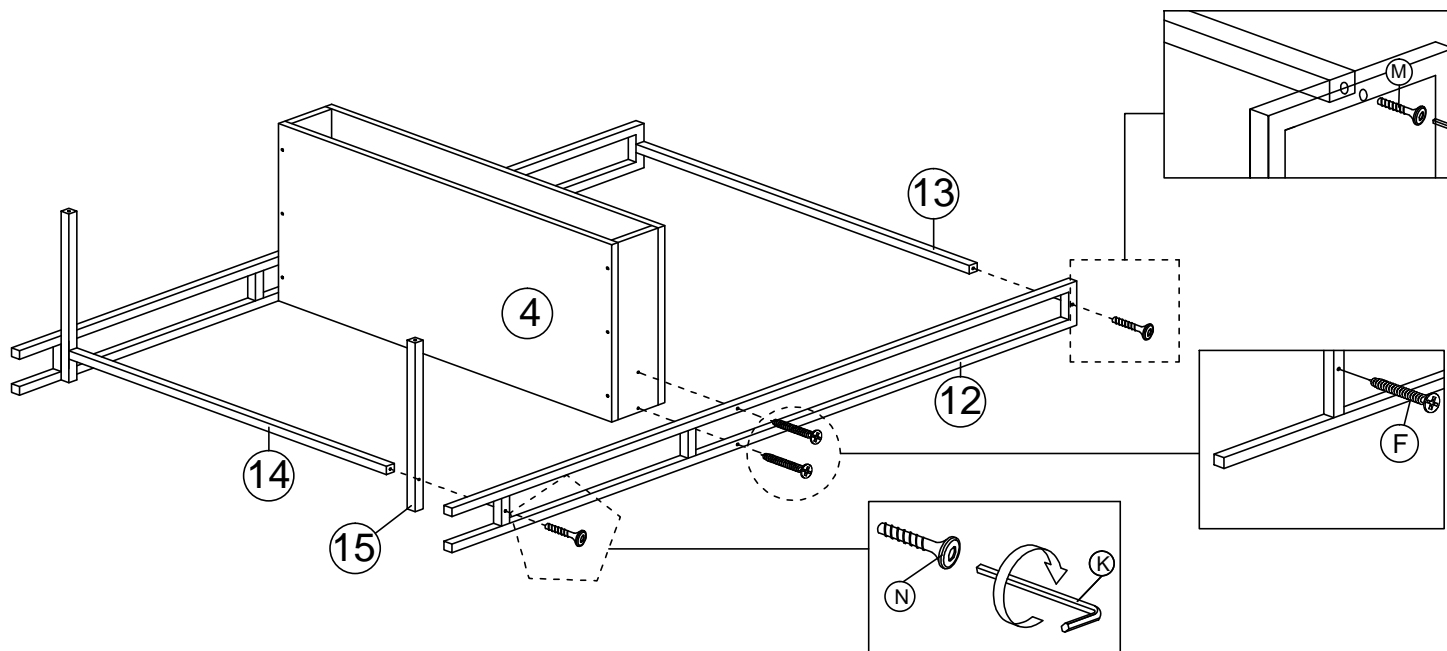
| | | | |
|---|---|-------------------|---|
| M |  | JCBB BOLT M6x40MM | 1 |
| K |  | L KEY | 1 |
| N |  | JCBB BOLT M6x70MM | 1 |
| F |  | CB SCREW M4x32MM | 2 |



STEP 14


| | | | |
|---|---|-------------------|---|
| M |  | JCBB BOLT M6x40MM | 2 |
| K |  | L KEY | 1 |
| F |  | CB SCREW M4x32MM | 6 |


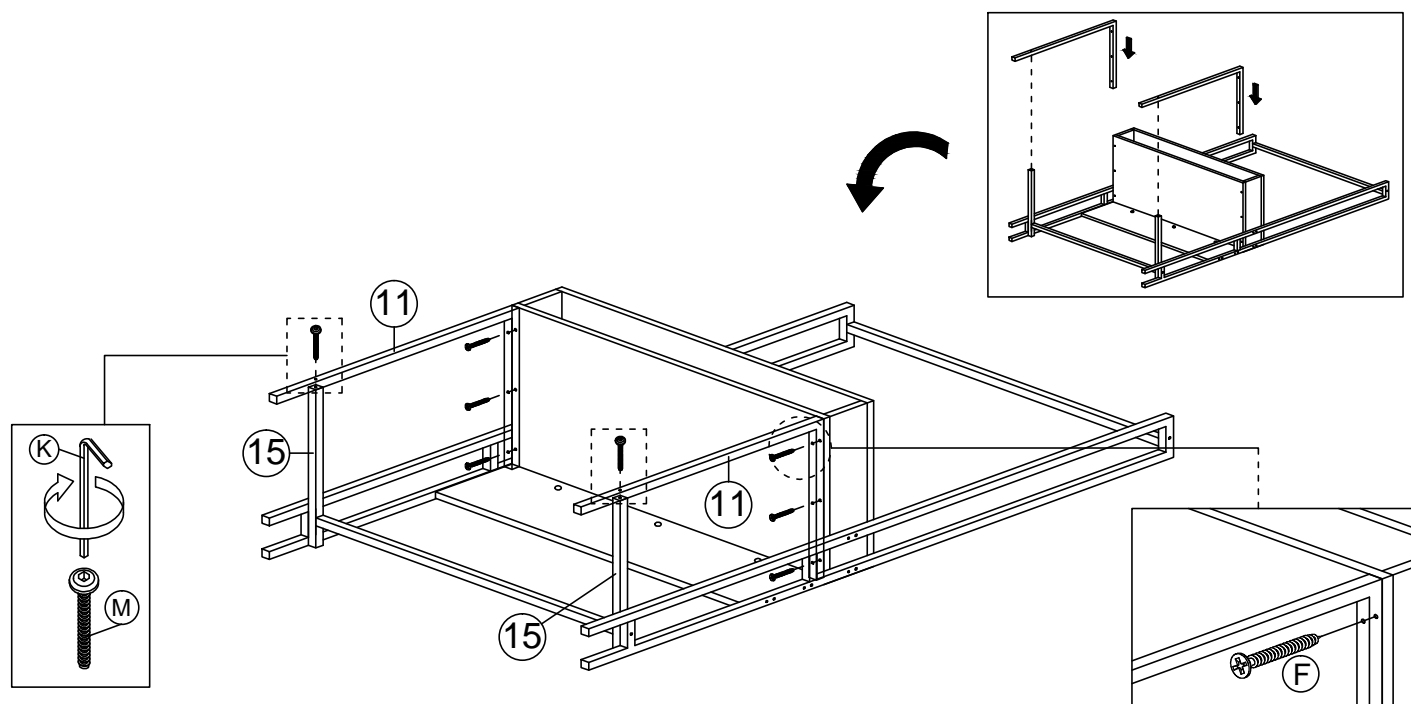


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 15

| | | | |
|---|---|--------------------|---|
| B |  | CB SCREW M3.5x16MM | 4 |
| Q |  | DOOR CLAMP 300MM | 2 |

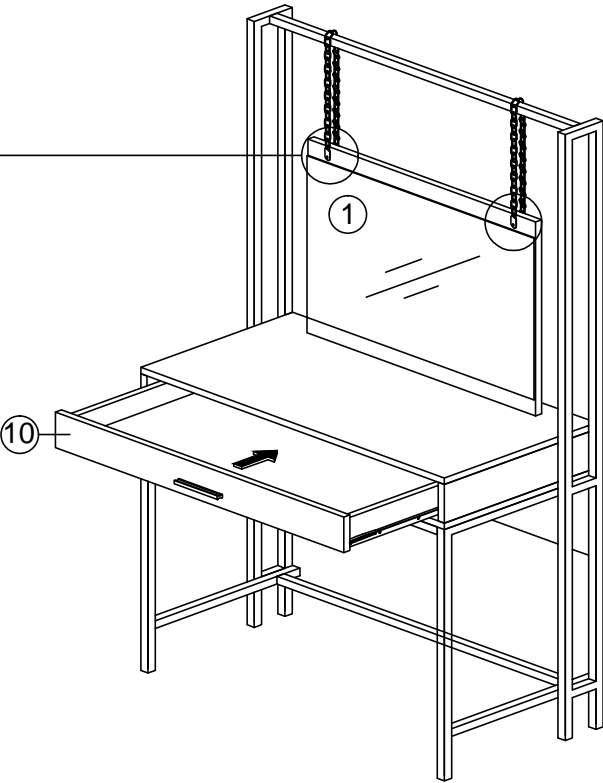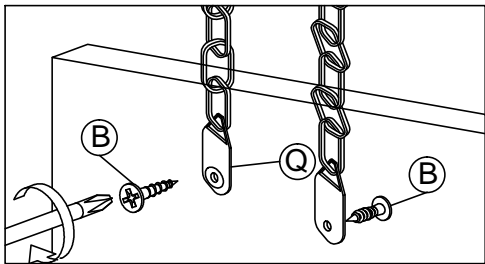

COMPLETED

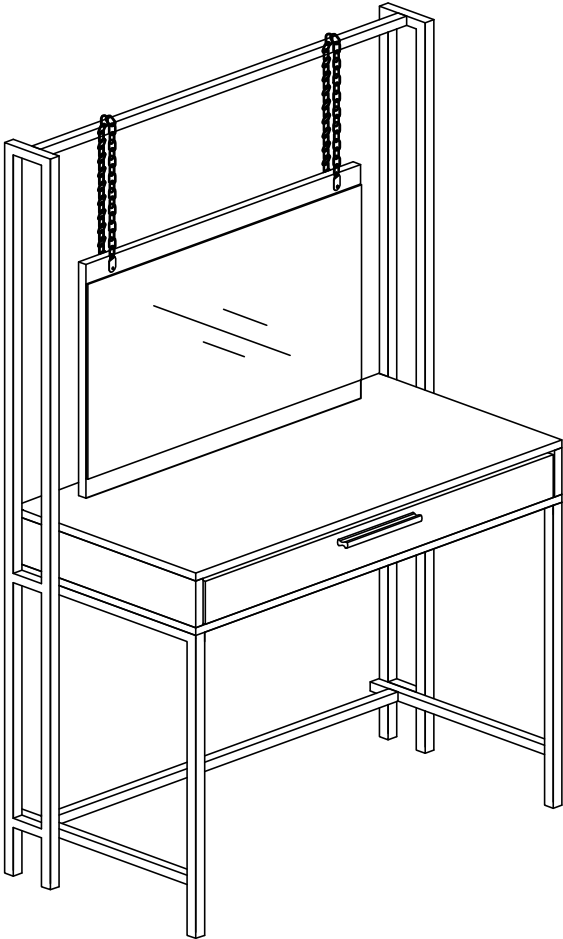


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




Installation of Anti-Tip Restraint


Kit includes:

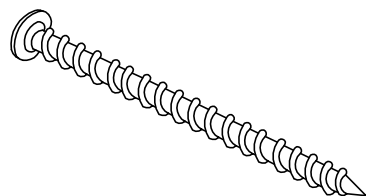


A (x1)
Long screw

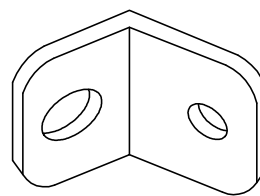

B (x2)
Mounting bracket

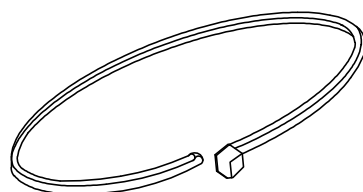

C (x1)
Restraint strap

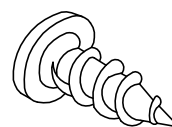

D (x1)
Short screw



WARNING



Serious or fatal crushing injuries can occur from furniture tip-over. To help Prevent tip-over:

- Install tip-over restraint provided
- Place heaviest items in the lower drawers
- Do not set TV's or other heavy objects on top of this product
- Never allow children to climb or hang on drawers, doors or shelves
- Never open more than one drawer at a time
- Do not defeat or remove the drawer interlock system


Use tip-over restraints may only reduce but not eliminate the risk of tip-over.

IMPORTANT: Use of this safety kit is mandatory. This restraint is not a substitute for proper adult supervision. Failure to detach this restraint before moving furniture may result in injury and damage.

FITTING OF ANTI-TIP SAFETY STRAP

STEP 1:

- Attach the mounting bracket (b) to the furniture in the solid part below the top panel a few inches away from the side of the unit.
- Screw (d) through the smallest hole of (b).

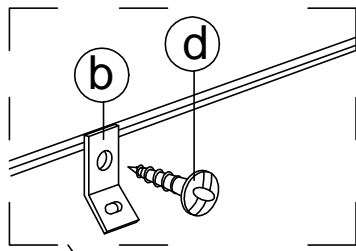


BACK SIDE OF TOP PANEL

WALL

FURNITURE

STEP 2:

- Locate a stud in behind the have to
- Place the other mounting bracket (b) on the wall stud 2 inches below the mounting bracket secured to the back of your unit.
- Attach to the wall stud using (a) through the smaller hole of (b).

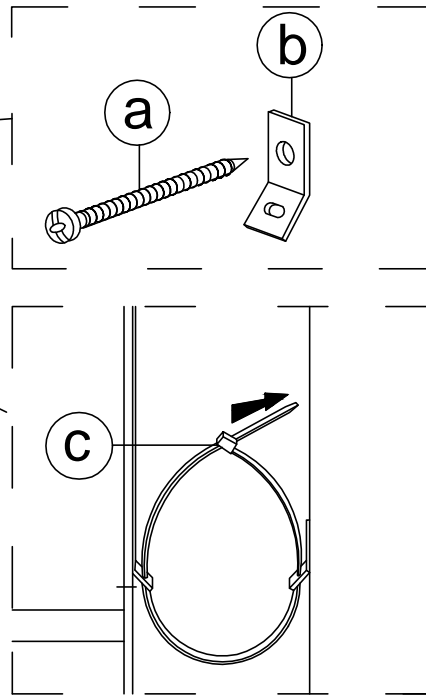

STEP 3:

- Repeat the same step a few inches away from the other side of the unit.
- Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap through the larger holes in each mounting bracket.
- Secure the straps and lock into place.

